

JacFab

"No drill" Front License Plate Bracket (v6)

Installation instructions & disclaimer

•Installation

-Tools needed

-10mm Socket


-Ratchet

-5/32 Hex head wrench

Installation is very simple and straight forward.

Use the 10mm socket and ratchet to remove the 2 10mm bolts under the bumper cover (shown right) Hold the license plate bracket in place and insert the supplied 10mm bolts, and washers (black hardware).

NOTE: *Blue loc-tite can be used if desired by the end user. DO NOT use red loc-tite!*

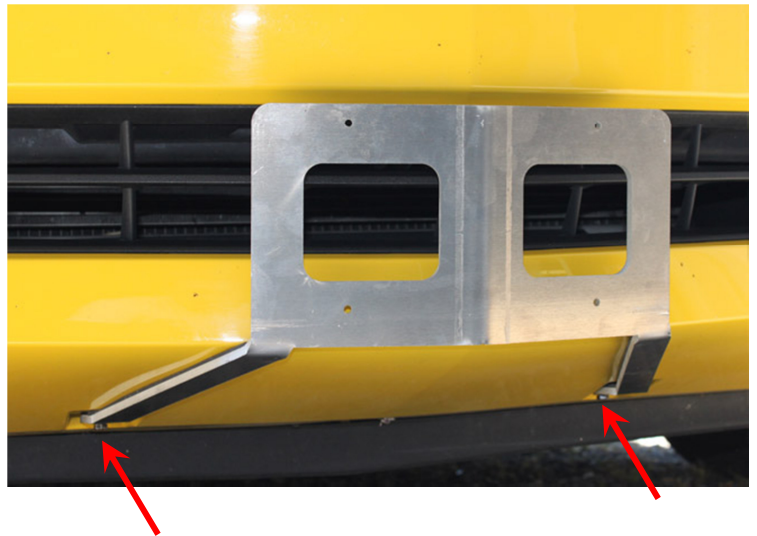

Slightly bend the license plate in the center and use the 5/32 hex head wrench to attach it using the supplied hex head screws with washers (silver hardware) to the four (4) holes in the face of the bracket.

Disclaimer: *You are installing this piece at your own risk. JacFab LLC. Or its associates cannot be held liable for any damages to the vehicle, any other property, personal injury, or injury to any other person caused by/from the installation of this piece on the end users vehicle.*